 
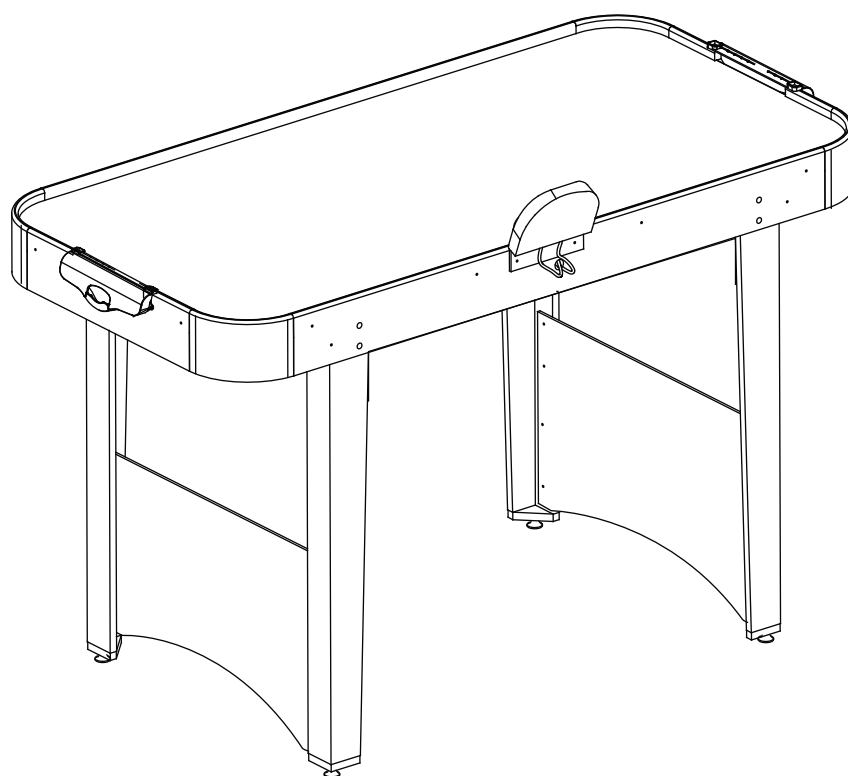 


 

 



 

 
 

 
 


# ASSEMBLY INSTRUCTIONS

SUA-4824WM



 
 
## PARTS LIST

<p>1</p>  <p>x1</p> <p>Mainframe</p>	<p>2</p>  <p>x2</p> <p>Right Leg</p>	<p>3</p>  <p>x2</p> <p>Left Leg</p>	<p>4</p>  <p>x2</p> <p>Leg End Panel</p>
<p>5</p>  <p>x4</p> <p>Leg Leveler</p>	<p>6</p>  <p>x1</p> <p>Electronic Scorer</p>	<p>7</p>  <p>x2</p> <p>Round Puck</p>	<p>8</p>  <p>x2</p> <p>Pusher</p>
<p>9</p>  <p>x2</p> <p>Felt Pad</p>	<p>10</p>  <p>x2</p> <p>Goal Box</p>	<p>11</p>  <p>x1</p> <p>Adaptor</p>	<p>12</p>  <p>x1</p> <p>Allen Key</p>
<p>13</p>  <p>x12</p> <p>Leg Bolt</p>	<p>14</p>  <p>x12</p> <p>Leg Washer</p>	<p>15</p>  <p>x18</p> <p>3.5 x 12mm Screw</p>	<p>16</p>  <p>x2</p> <p>3.5 x 14mm Screw</p>

### ASSEMBLY INSTRUCTIONS:

1. Find a clean, level place to begin the assembly of your Air Hockey Table. The table will be assembled upside down and then turned over on its legs once the assembly completed. This game table is heavy, and turning it over will require at least two strong adults.
2. Remove all the parts from the box and verify that you have all of the listed parts as shown on the parts list page. Carefully cut or tear the four corners of the box so that the bottom of the box can be used as your work surface.

**FIG. 1**

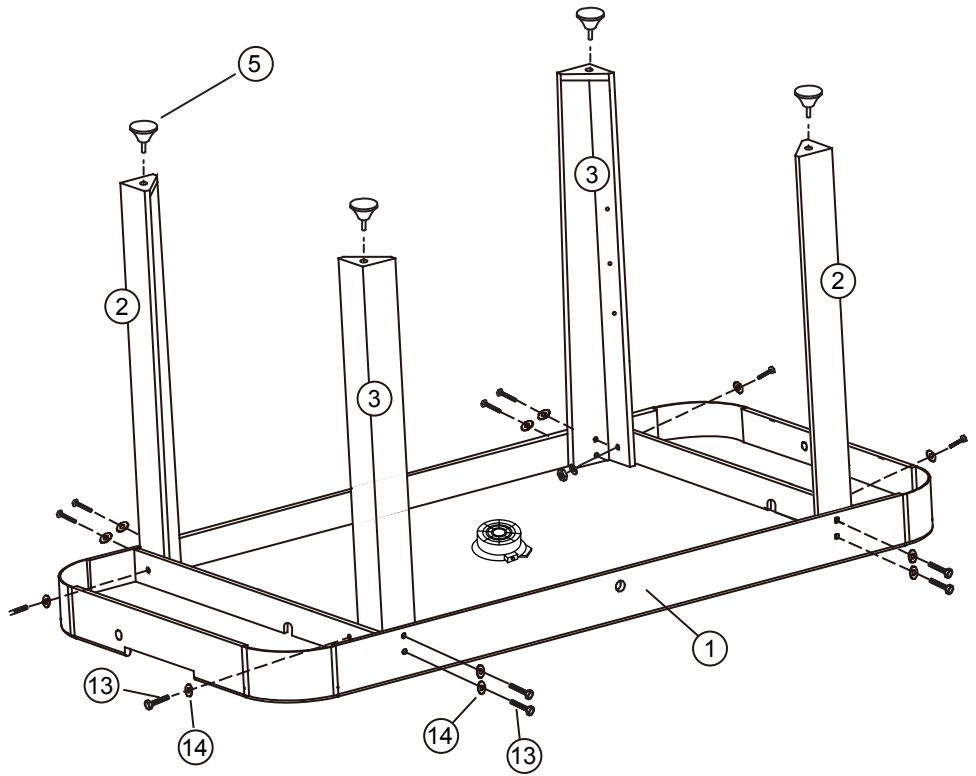 
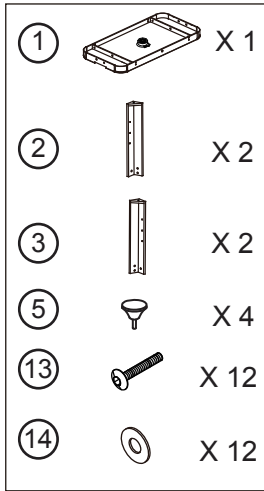 


**FIG.1**

3. Place the Mainframe (#1) face down on a clean and flat surface. Attach the Right Leg (#2) and Left Leg (#3) to the Main Frame using three Leg Bolts (#13), three Leg Washers (#14) per Leg. **See FIG.1.**

4. Screw the Leg Levelers (#5) into the bottom of each leg.

 
 
 
 
**FIG. 2**

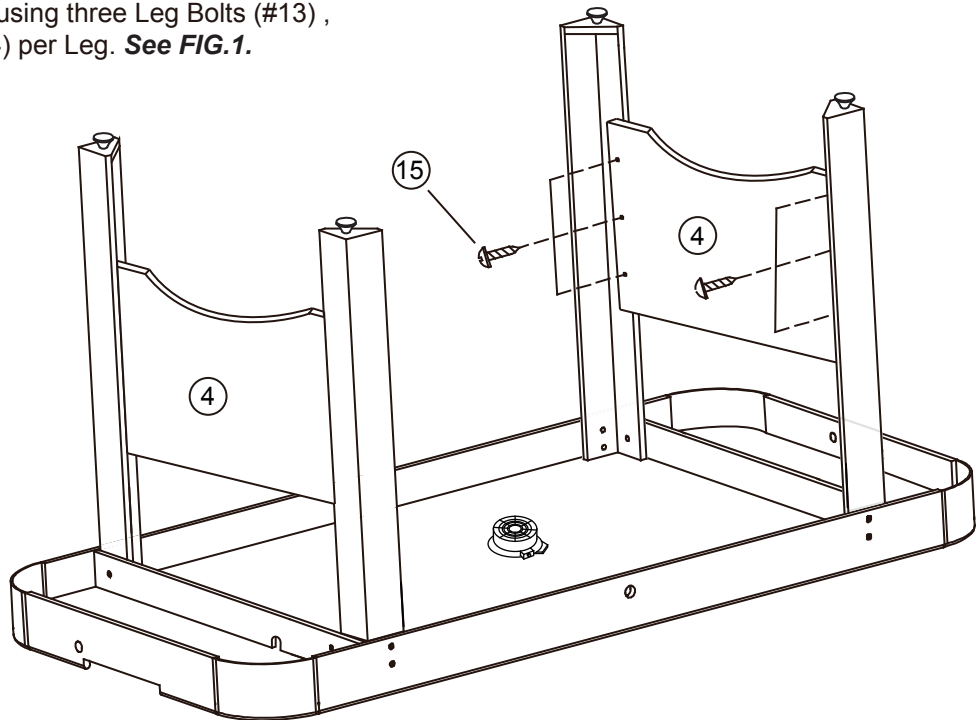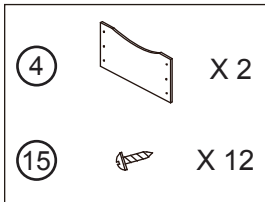

**FIG.2**

5. Attach the Leg End Panels (#4) to the Legs using six Screws (#15) per Leg End Panel.

6. Lift the table assembly from the floor with two adults, turn it over, and set table on its leg in the location where you will play. **Go back and make sure that all connections are tight.**

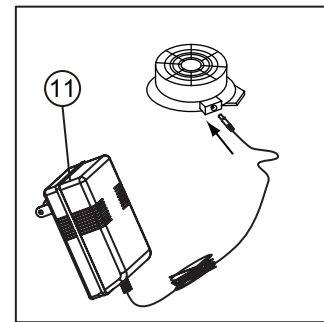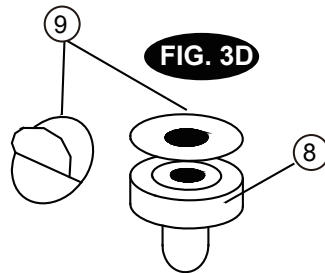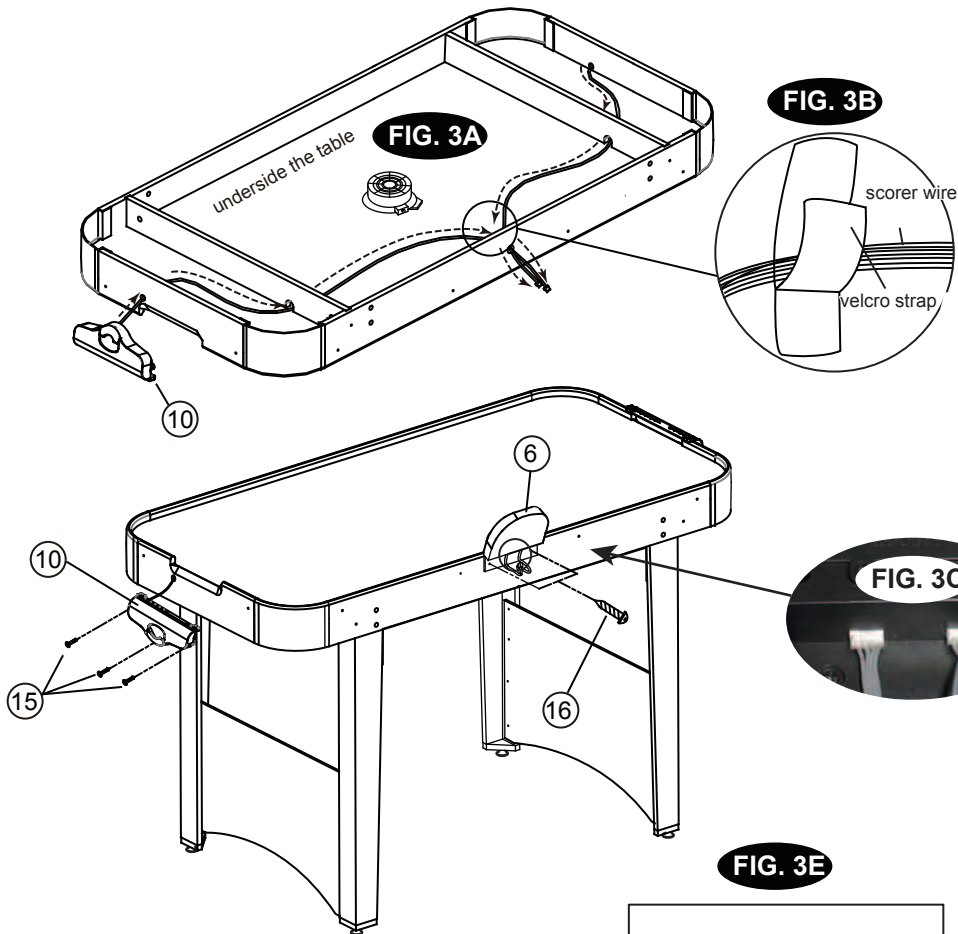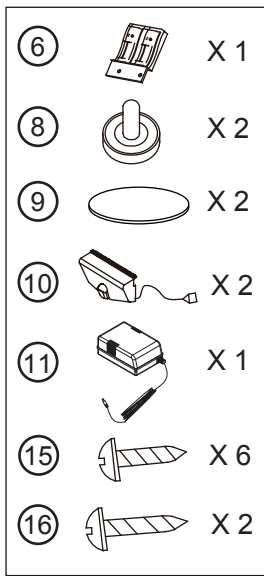**FIG. 3****FIG.3**

7. Thread the wire from Goal Box (#10) through the openings of the end aprons and support of the playfield to the opening of side apron and use Velcro Straps to fix Scorer Wire. **See FIG. 3A & 3B.**
8. Attach the Goals (#10) to each End Apron using three Screws (#15). **See FIG. 3.**
9. Attach the Electronic Scorer (#6) to the side apron in the pre-drilled holes using two Screws (#16). Insert the Scorer Wire into the Electronic Scorer (#6). **See FIG. 3 & 3C.**
10. Tear off the backside paper of the Felt Pad (#9) and stick them at the bottom of the Pushers (#8). **See FIG. 3D.**
11. Insert the Adaptor (#11) into the DC Motor . **See FIG. 3E.**